

TV Codes

Acer	454, 728, 782	... <i>Citizen</i>	051, 068, 073, 091, 108, 168, 211, 213, 233, 355, 385, 388, 391, 400, 424, 567, 577
Admiral	026, 027, 028, 029, 054, 211, 213, 408		
Advent	047, 072, 094, 425, 447, 463	Coby	558
Adventura	047	Colortyme	730
Aiko	015, 051, 391	Concerto	073, 095, 108, 573, 587
Aiwa	214, 471		
Akai	020, 053, 462, 473, 522, 524, 547, 572, 586	Contec/Cony	039, 147, 168, 233, 400, 732
Alleron	211, 395	Coronado	023
Amark	023, 215	Craig	168, 217, 218, 220, 223, 400, 786
Amstrad	157		
Amtron	168, 400	Crosley	072, 405, 165, 166, 167, 168, 169, 189, 191, 211, 233, 355, 387, 392, 395, 400, 401, 402, 355, 388, 403, 408, 415, 424, 456, 507, 587, 731, 729, 736, 741, 759, 777
Anam	044, 168, 217, 218, 219, 220, 221, 222, 223, 400, 403	Crown	023
AOC	053, 073, 108, 384, 573, 587	Curtis	016, 023, 031, 054, 072, 073, 107, 108, 211, 213, 355, 388, 403, 408, 415, 424, 456, 507, 587, 736, 741, 759, 777
APEX	030, 038, 427, 599	Mathes	031, 054, 072, 073, 107, 108, 211, 213, 355, 388, 403, 408, 415, 424, 456, 507, 587, 736, 741, 759, 777
Astar	462		
Audiovox	168, 191, 220, 400, 465, 659	CXC	168, 400
Belcor	073	Daewoo	051, 068, 073, 095, 158, 159, 189, 191, 194, 196, 197, 198, 200, 202, 204, 205, 206, 207, 209, 737, 741, 793
Bell & Howell	211, 213, 355, 388, 736		
BenQ	454, 820		
Bradford	168, 400		
Brilliant	792		
Broksonic	165, 167, 423, 434, 809	Envision	073, 095, 108, 573, 587
Brokwood	073	ESA	454, 456, 538
Candle	068, 073, 091, 108, 385, 573, 587	Fisher	104, 355, 356, 388, 736
Carver	072, 405, 729		
Celebrity	020	Fujitsu	211, 395, 460, 469, 560, 776, 813
Centurion	095, 107, 108	Dimensia	759
Citizen	015, 023, <i>continue...</i>	Dell	072, 094, 448, 488
		Diamond	563
		Vision	<i>continue...</i>

Dumont	049, 073, 108, 573, 587	... <i>Funia</i>	211, 395, 400
Duraband	157		
Dynex	167, 415, 424, 567, 577	Futurtech	168, 400
Electro Home	020, 044, 073, 095, 108, 403, 573, 587, 741	Gateway	426, 533
Emerson	016, 021, 023, 031, 053, 064, 073, 100, 103, 108, 139, 158, 159, 164, 165, 166, 167, 168, 169, 189, 191, 211, 233, 355, 387, 392, 395, 400, 401, 402, 355, 361, 573, 587	GE	015, 018, 042, 044, 045, 049, 054, 055, 068, 069, 070, 073, 090, 092, 095, 101, 102, 103, 108, 211, 213, 389, 390, 396, 397, 403, 406, 407, 573, 587, 739, 742, 806
Go Video	443, 562	Gibraltar	023, 048, 049, 053, 068, 073, 090, 095, 107, 108, 233, 360, 361, 573, 587
Gradiente	104		
Grundig	233		
Grunpy	023, 047, 073, 095, 108, 233, 360, 361, 384, 573, 587		
Haier	020, 053, 073, 095, 108, 427, 519, 573, 587, 596, 106, 233, 396, 397, 410, 589, 728, 732, 742, 753, 763, 766	Golbalta	023, 048, 049, 053, 068, 073, 090, 095, 107, 108, 233, 360, 361, 573, 587
Hall Mark	073, 095, 108, 573, 587		
Harvard	168, 400		
Hitachi	023, 039, 068, 073, 095, 096, 097, 098, 099, 100, 108, 233, 393, 573, 587, 732, 750, 753, 756, 787, 807, 813	Haier	020, 053, 073, 095, 108, 427, 519, 573, 587, 596, 106, 233, 396, 397, 410, 589, 728, 732, 742, 753, 763, 766
Kawasho	020, 073, 095, 108, 573, 587		
Kenwood	073, 095, 108, 573, 587		
Kloss	071, 168, 404, 404		
Novabeam	053, 068, 756, 787, 807, 813		
KMC	023		

Konka	065, 445, 589	... <i>MGA / Mitsubishi</i>	095, 104, 107, 108, 814, 815, 109, 110, 216, 384, 394, 395, 398, 399, 417, 573, 587, 739, 790
Kosch	462		
KTV	023, 053, 064, 168, 233, 366, 400, 741, 770		
Kurazai	211, 213		
TV Legend	169	Midland	023, 045, 049, 396, 068, 073, 741, 742, 755
LG	023, 053, 068, 073, 090, 107, 108, 233, 360, 361, 384, 424, 567, 577, 587, 825		
(Goldstar)	090, 107, 108, 233, 360, 361, 384, 424, 567, 577, 586		
Lodgenet	211, 213		
Logik	211, 213		
Luxman	068, 073, 095, 108, 573, 587		
LXI	024, 026, 027, 028, 029, 038, 397, 403, 404, 405, 419, 423, 426, 456, 463, 470, 472, 523, 533, 549, 594, 595, 729, 740, 783, 810	Motorola	026, 027, 028, 029, 044, 403, 573, 587
Mag	... <i>see Philips</i>		
Magnavox	211, 213	MTC	023, 108, 384, 573, 587
Majestic	053, 072, 073, 097, 098, 107, 108, 109, 405, 573, 587, 729, 736, 755, 759, 773		
Marantz	073, 097, 098, 107, 108, 109, 405, 573, 587, 729, 736, 773		
Matsui	582, 583, 585	Multitech	168, 400
Maxent	426, 533, 534	Multivision	738
Mcintosh	555	NAD	023, 773, 787
Megatron	215		
Memorex	090, 211, 213, 355, 384, 388, 405, 423, 459, 736	NEC	028, 029, 044, 068, 073, 090, 108, 200, 384, 403, 464, 573, 587, 730, 810
Mitsubishi	073, 090, 073, 090, 042, 043, 051, 068, 073, 091, 093, 095, 108, 233, 371, 372, 457, 467, 573, 587, 749		

Philco	023, 044, 053, 068, 071, 072, 073, 091, 093, 095, 108, 233, 371, 372, 457, 467, 573, 587, 749	... <i>Panasonic</i>	044, 045, 046, 403, 419, 423, 429, 631, 742, 771, 829
Philips / Magnavox	023, 044, 068, 071, 072, 073, 091, 093, 094, 095, 108, 233, 371, 372, 403, 404, 405, 463, 573, 587, 729		
Quasar	043, 044, 045, 046, 403, 742, 752, 770, 771		
Radio Shack	022, 023, 046, 069, 073, 108, 168, 233, 355, 388, 390, 397, 398, 403, 404, 405, 419, 423, 426, 456, 463, 470, 472, 523, 533, 549, 594, 595, 729, 740, 783, 810		
RCA	052, 053, 054, 055, 068, 069, 070, 073, 095, 100, 108, 191, 384, 403, 408, 416, 573, 587, 725, 750, 755, 758, 759, 762, 765, 768, 769, 791		
Realistic	022, 023, 046, 069, 166, 168, 233, 355, 388, 400, 736, 741, 759		
Runco	049, 525		
Sampo	023, 073, 090, 108, 426, 533, 573, 587, 741, 818, 779, 797		
Samsung	017, 023, 031, 073, 090, 095, 107, 108, 134, 147, 151, 153, 233, 384, 386, 411, 424, 426, 508, 533, 573, 577, 830		
Sanyo	073, 104, 108, 353, 355, 356, 376, 377, 388, 573, 587, 735, 736, 775		
Sceptre	073, 090, 108, 168, 211, 233, 395, 400, 573, 587		
Scott	073, 090, 108, 168, 211, 233, 395, 400, 573, 587		
Sears	023, 029, 030, 031, 038, 039, 068, 072, 095, 104, 108, 191, 213, 353, 355, 356, 388, 395, 405, 573, 589, 600, 759, 763, 773, 792		
Sharp	023, 024, 025, 026, 027, 028, 029, 073, 095, 446		
Shogun	073, 108, 573, 587		
Signature 2000	023, 026, 027, 028, 029, 108, 211, 213		
Simpson	091, 385		
Sony	014, 020, 021, 050, 095, 178, 540, 774, 804, 824, 827, 828, 788, 794, 800, 802		
Soundesign	073, 091, 108, 168, 211, 385, 395, 400, 573, 587		
Soyo	562		
Squareview	157		
SSS	073, 108, 168, 400, 573, 587		
Starlite	168, 400		
SunBriteTV	587		
Superscan	419, 423		
Supre-Macy	380		
Supreme	020		
SVA	592		
Sylvania	047, 068, 071, 072, 108, 384, 395, 400, 561, 573, 587, 743		
Symphonic	047, 132, 157, 168, 400, 456, 761		
Tandy	026, 027, 028, 029		
Tatung	044, 403, 446		
Tehncis	045, 742		
Techwood	045, 068, 073, 573, 587, 741, 818		

ADC	318	... <i>Techwood</i>	742
Adcom	325		
Aiwa	176, 301, 518, 521, 633, 634, 643, 512	Teknika	023, 068, 091, 108, 168, 213, 463, 587, 729, 732, 741
Akai	142, 261		
Bose	302, 440, 644		
Carver	155, 176, 180, 518, 668, 669, 718		
Crown	154		
Daewoo	501		
Denon	262, 307, 660, 661, 704, 715		
Everquest	136		
Fisher	063, 180		
Fosgate	305		
Audionics	226, 269		
Harman	130, 257, 305, 306, 669, 716		
Kardon	176		
SAE	492		
Samsung	429, 546		
Sansui	283, 518, 668, 669		
Sanyo	137, 195, 309		
Scientific	312		
Atlanta	063, 137, 176, 277, 282, 309, 444		
Scott	272		
Sharp	294		
Sherwood	229, 267, 505, 506		
Sony	041, 057, 067, 232, 287, 292, 442, 610, 611, 635, 636, 720, 835, 836		
Soundesign	083, 088, 148, 239, 242, 265, 311, 320		
SSI	313		
STS	318		
Taekwang	142		
Teac	314, 316		
Technics	032, 184, 512, 643		
Toshiba	662		
Victor	114, 241		
Wards	063, 114, 241, 518, 669		
Yamaha	145, 254, 280, 303, 318, 441, 638, 639, 640, 641, 642, 643, 512		

Audio Codes

Panasonic	184, 267, 280, 438, 441, 638, 639, 640, 641, 642, 643, 512	... <i>Yamaha</i>	521, 542, 579, 630
Zenith	036, 083, 088, 148, 239, 265		

Programming Procedure

The Moxi® remote is pre-programmed to control your Moxi HD DVR or Moxi Mate.

You can also choose to program your remote to control the volume, mute, and power functions of your TV or audio device.

There are two ways to program your TV or audio device: by code or by search. To program by code, you need to find the code for your particular TV in the tables listed in this document. If none of the codes work or there aren't any listed for your TV, you can program by search.

Programming the TV by Code

1. Turn on your TV.
2. In front of your TV, press and hold the MOXI and OK buttons on your remote together until the red LED at the top of the remote blinks 2-times. Release both buttons after the red LED blinks as indicated.
3. Using the numeric buttons on the remote, slowly enter the 1st setup code listed for your TV brand.
 - a. If that code is valid, the red LED will blink two times. Proceed to step 4 to test your remote.
 - b. If that code is invalid, the red LED will blink once slowly. Return to step 2, and continue with the next code listed for your TV brand. If you have entered all of the codes listed for your TV brand without finding a code that operates Power, Vol+/- and Mute, refer to the Programming by Search section below.
4. Test your remote by pressing the POWER button several times.
5. If your TV turns on and off, try pressing the Vol +/- and Mute buttons. If all of these buttons operate your TV, you have programmed the correct code. If any one of the buttons do not work, return to step 2, and try the next code listed for your TV brand. If you have *continue...*

tried all of the relevant codes and the buttons still do not function, refer to the Programming by Search section below. If the buttons are functioning properly, proceed to Section 3 to program your Audio device.

Programming the Audio Device by Code

1. Turn on your TV.
2. Repeat steps 2-5 in the "Programming Your TV by Code" section above, but use the setup codes listed for your Audio brand

Programming by Search

If your TV or Audio devices are not listed in the setup code tables, or your remote does not respond to the listed codes, you can try programming the remote by "Searching" for the correct TV and audio codes. Using this method, the order you program your devices (TV first, then audio or audio first, then TV) is not important as long as you follow these steps:

1. Turn on your TV and audio devices.
2. In front of your TV and audio devices, press and hold the MOXI and OK buttons on your remote together until the red LED at the top of the remote blinks 2-times. Release both buttons after the red LED blinks as indicated.
3. Slowly press the Ch + button repeatedly, which will cycle through potential remote codes. Continue pressing it until you find a code that turns off your TV or audio device off.

As soon as your TV or audio device turns off, stop pressing the Ch + button.

4. Press Mute. If your TV or audio device:
 - a. Turns back on, press OK to lock in the code. The red LED at the top of the remote will blink 2-times.
 - b. Does not turn back on, you may have gone past the correct code. Press the *continue...*

- b. ch - button one step at a time until you find a code that turns your TV or audio device back on. Once you have found a code that turns your TV or audio device on and off, press OK to lock in the code. The red LED at the top of the remote blinks 2-times.
5. Repeat steps 2 – 5 above to program your second electronic device, TV or audio.

Replacing batteries

When replacing AA batteries, use only high-quality, non-corrosive batteries designed for use in electronic equipment.

Resetting to factory default

Press the MOXI and OK buttons simultaneously, hold until the LED light blinks twice, and then press CLEAR, CLEAR, CLEAR.

Older devices

Some older TVs may not be supported. If the TV still fails to respond, use its original remote to control it.

To disable the backlight on the remote

1. Press and hold the MOXI and OK buttons simultaneously on the Moxi remote until the LED at the top of the remote blinks twice.
2. Press the STOP button. If successful, the LED at the top of the remote will blink twice.

To enable the backlight on the remote

1. Press and hold the MOXI and OK buttons simultaneously on the Moxi remote, until the LED at the top of the remote blinks twice.
2. Press the REC button. If successful, the LED at the top of the remote will blink twice.

Moxi Remote Tips

- * locks/unlocks items in SuperTicker™, brings up virtual mouse in MoxiNet pages
- ticker** displays and hides SuperTicker™
- power** turns the TV and other audio device on and off
- moxi** jumps to Recorded TV list, pressing twice brings up Grid Guide
- live TV** jumps to full-screen live TV

- play** starts a recorded program, photo slideshow, or music track
- rew** multi-speed rewind for playback (press multiple times to select the speed)
- fwd** multi-speed fast forward for playback (press multiple times to select the speed)
- rec** records the currently-playing show or the show in center focus
- stop** exits out of a recorded show or stops a recording in progress if you're watching full screen
- pause** pauses a live or recorded show, photo slideshow, or music track
- replay** rewinds the program seven seconds
- skip** jumps ahead in stored or recorded video (30 second default), moves the Moxi Menu forward one day

- number** tune directly to channels, enter text in menus, make choices in games
- 1** once to backspace during text entry
- 0** once to add a space during text entry
- clear** deletes items (recorded shows) from menus and clears menu elements from full screen view
- enter** executes numeric or text entries



- info** displays additional information about the selected item
- zoom** toggles between an open Moxi Menu and full-screen TV without losing menu position
- arrow** navigates menus (hold for turbo speed) and plays games. Left arrow exits most menus
- OK** selects or activates the chosen item
- back** jumps back 15 minutes, shows previous note page, jumps 30 minutes in the Moxi Menu, goes to the previous photo
- next** jumps forward 15 minutes, shows next note page, jumps 30 minutes in the Moxi Menu, goes to the next photo
- MOXI** returns, one step at a time, back to the Channels category of the Moxi Menu

- vol** when programmed, adjusts the audio volume on the TV or connected audio device
- mute** toggles sound on and off
- jump** goes to the last viewed channel, can be used to tune to analog channels
- ch** changes channels or pages through vertical menus (hold for turbo speed)

MOXI® REMOTE
BACKLIT



Remote Control
Programming and Use
Instructions

The list of supported remote control codes are frequently updated as new electronic devices become available. For the latest list of codes, please visit <http://www.moxi.com/support>